# CNS-1/CNS-2 シールドの取り外し、取り付け方

※イラストはCNS-1シールドです。



シールドを完全に 下ろすと、シールド ノブがフックに掛か ります。走行時は、 このポジションにす ることを推奨しま す。

### ■ シールドの取り外し方


- 1. シールドを全開の状態にします(図1)。
- 2. トリガーを下に引きながら、シールドを手前に持ち上げフック(A) (B)を外したのち(図2)、フック(C)をフックレールから矢印方向に 外して取ります(図3)。
- 3. 反対側も同じ要領で取り外します。





- 1. シールドを全開状態の位置に合わせ、フック(C)をフックレ ールに差し込みます(図4)。
- 2. シールドの矢印付近を上からカチッとロックされるまで押 し、フック(A)(B)をフックレールにしっかりとはめ込みます (図5)。
- 3. 反対側も同じ要領で取り付けます。


フックやギアがシールドベースにはまってい ないと、走行中にシールドが外れ、思わぬ事


故を引き起こす可能性があります。取り付け後は、シールドの 開閉操作を数回繰り返し、フックやギアが確実にはまってい るか確認してください(図6)。また、シールドを完全に下 ろした状態で、シールドノブがフックに掛かるか確認してく ださい。

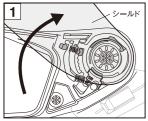


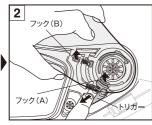

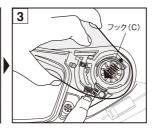

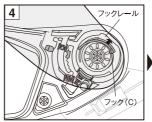

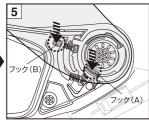

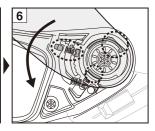


# CNS-1シールドベースの取り付け方





本取扱説明書中で表記される 「右」、「左」は、ヘルメットをか ぶった状態で着用者からみた 「右」、「左」に対応しています。

●シールドベース下部の孔を、シェル側の下部 スクリュー孔の上下左右の中心に合わせ(図 1)、スクリューを仮止めします。

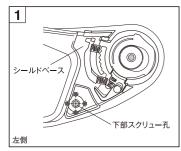

②次に、シールドベース上部の孔を、シェル側の 上部スクリュー孔の上下左右の中心に合わせ (図2)、ワッシャーを溝に合わせてはめ、スク リューを締め付けた後、下部スクリューも締め 付けます(図3)。

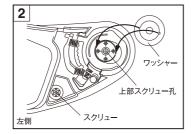


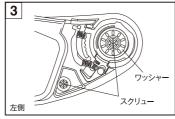

- ❸反対側のシールドベースも同じように取り付 けます。
- 4シールドを取り付けます。取り付け後、シールド のフックがフックレールに確実にはまっている か確認してください。
- ⑤シールドを完全に下ろした状態で、シールドが 窓ゴムに密着しているか確認してください。

⑥シールドと窓ゴムの間に隙間がある場合、シ ールドを外してシールドベースの位置を調整 してください。シールドベースの調整は、2か 所のスクリューを緩めたのち、シールドベー スを図の矢印方向(図4参照)にずらしてス クリューを締め直します。調整後、シールドを 取り付け、シールドと窓ゴムの隙間を確認し てください。隙間がなくならないときは、再度 シールドを外し、同じ要領で反対側のシール ドベースの位置を調整してください。

最後に、シールドを完全に下ろした状態で、 シールドノブがフックに掛かるか確認してく ださい。シールドベースの取り付け位置が極 端に後方になると、シールドノブがフックに 掛からなくなることがあります。また、シール ド開閉の際にシールドがシェルと干渉し、シ ェルに傷が付く恐れがありますのでご注意く ださい。

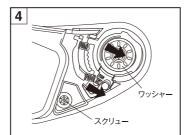


## ↑ ご注意 シールドおよびシールドベースの取り扱い

- 1. ご使用前に、左右のシールドベース取り付けスクリューがしっかりと締まっていることを確 認してください。スクリューは定期的に確認し、緩んでいるときは締め直してください。
- 2. シールドの汚れや傷は走行中の視界の妨げとなり、大変危険です。シールドが汚れたり傷が 付いたりしたら、直ちに使用を中止し、取り外して洗浄するか、交換してください。
- 3. シールドは、水で薄めた中性洗剤で洗い、真水でよくすすいでから柔らかい布でふき取り、乾 かしてください。40℃を超える湯・塩水・酸性またはアルカリ性の洗剤・ベンジン・シンナー・ガソ リン・その他の有機溶剤・ガラスクリーナー等、有機溶剤を含むクリーナー類は使用しないでく ださい。これらが付着すると、シールドが変質し、安全性に支障をきたす可能性があります。
- 4. シールドが曇った状態で走行しないでください。視界が妨げられ大変危険です。シールドが 墨った場合、ロアエアインテークを開けたり、シールドを開けたりしてヘルメット内をよく 換気し、シールドの曇りを取り除いてください。また、PINLOCK®fog-free sheet / PINLOCK® EVO lens (オプション) の使用も、シールドの曇り防止に効果的です。
- 5. PINLOCK® fog-free sheet / PINLOCK® EVO lens (オプション) をご使用の場合は、必ず 純正品をご使用ください。取り扱い方法については、PINLOCK® fog-free sheet / PINLOCK® EVO Jensに同梱されている取扱説明書をご覧ください。
- 6. 防曇性能をもつPINLOCK® fog-free sheet / PINLOCK® EVO lensをこのシールドに使用し た場合、シールドの光線透過率は最大10%減少します。
- 7. 着色シールド、もしくはミラー加工のシールドとサンバイザーを併用しないでください。併用した 場合、視界が制限され、大変危険です。
- 8. 着色シールドは、夜間やトンネル内、雨天や霧等、視界の悪い環境では使用しないでください。
- 9. ミラーコートは、ご購入後の発色から色が変化する場合があります。
- 10. シールドベースをクリーニングしたり、あるいはシールドベースを交換した場合、シールドを 閉めてシールドと窓ゴムの密着を確認してください。隙間がある場合、風の巻き込みや風 切り音の原因となるため、シールドが窓ゴムに密着するようシールドベースの位置を調整し てください。
- 11. スクリューの締め付けなどを行う際は、ビットサイズ「No.2」のプラスドライバーを垂直に 当て、ていねいに回してください。サイズの合わないドライバーや電動ドライバーを使用した り、スクリューをななめに締め付けたりすると、ネジ頭を破損する場合がありますので、十分注 意して回してください。スクリューを交換する場合は、必ず純正部品(アルミニウム製)をご 使用ください。スクリューを強く締めすぎると、スクリューが破損する場合がありますので ご注意ください。(推奨締め付けトルク:80cN·m/約8kgf·cm)
- 12.シールドの視界に入る位置に、ステッカーや粘着テープを貼らないでください。

219 株式会社 SHOEI ■本社・国内営業部 〒110-0005 東京都台東区上野5-8-5 CP10ビル7F TEL.03-5688-5180 製品の品質についてのお問い合わせは、〈茨城工場内 顧客サービス課〉茨城県稲敷市羽賀1793 TEL.029-892-3617 e-mailthelp@shoeihelmet.co.ipまでご連絡ください。

# Removing and Installing the CNS-1/CNS-2 Shield/Visor \*The following drawings depict CNS-1 shield/visor.

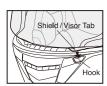

If you pull the shield/visor completely down, the shield / visor tab will clasp the hook. We recommend that you use the shield/visor in this position while riding your motorcycle.

#### Removing the CNS-1/CNS-2 Shield/Visor


- 1. Move the shield/visor to the fully open position (Drawing 1).
- 2. While pulling the trigger down, lift the shield / visor and release hooks (A), (B) and (C) as per Drawing 2 and 3.
- 3. Follow the same procedure to remove the other side.


## ■Installing the CNS-1/CNS-2 Shield/Visor


- 1. Place a shield/visor in full open position and insert shield / visor hook (C) into the hook rail (Drawing 4).
- 2. Press the shield/visor as indicated in the Drawing 5. The trigger will rise as the shield/visor clicks, and hook (A) and (B) will fit into the hook rails.
- 3. Follow the same procedure to install the other side.


**A** WARNING


If the hook and gear are not securely fastened in the shield/visor base, the shield/visor may come loose while riding and an accident may unexpectedly occur. After installing the shield/visor, open and close the shield/visor a few times to confirm that the hook and gear fit securely. With the shield/visor completely closed, confirm that the shield/visor tab is clasped by the hook.

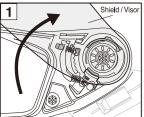


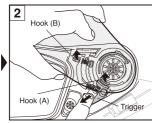

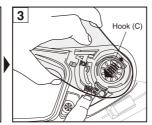

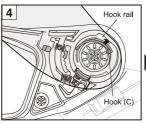

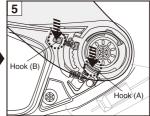

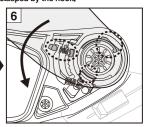


# Installing the CNS-1 Shield / Visor Base Plates





The terms "right" and "left" in this manual are from the point of view of a rider who is wearing the helmet.

1 Align the center of the hole in the lower base plate with the center of the lower screw hole (Drawing 1) and tighten the screw temporarily.

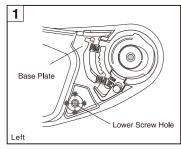

2 Next, align the center of the hole in the upper base plate with the center of the upper screw hole (Drawing 2). Place the washer on the base plate and tighten the screw. Firmly tighten the lower screw to fix the base plate (Drawing 3).

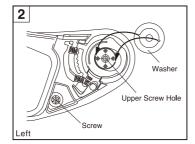


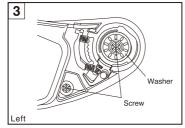

- 3 Follow the same procedure to install the other side
- 4 Install the shield/visor. Confirm that the hooks fit firmly into the hook rails.
- 6 Close the shield/visor and check that the window bead completely seals up the shield / visor in all around.

6 If there is a gap between the shield/visor and the window bead, remove the shield/visor and adjust the position of the base plate on either side of the helmet. To adjust. loosen both screws and move the plate slightly toward the direction indicated in the Drawing 4. Tighten the screws and fix the base plate. Once again, install the shield/visor and check that the window bead completely seals up around the shield/visor. If the gap still remains, follow the same procedure to adjust the position of the base plate on the other side of the

After adjusting the position of the base plate, close the shield/visor and confirm that the shield/visor tab is clasped by the hook. If the base plates are not installed properly, the shield / visor tab may not clasp the hook. Also, make sure that the shield / visor and the shell of the helmet are not scratching each other when opening and closing.

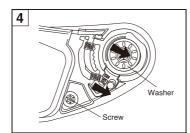

# A WARNING Handling the Shield / Visor and Base Plate

- 1. Before you use the helmet, check that the shield/visor screws are securely tightened. The shield/visor screws should be checked periodically. Re-tighten any loose screws.
- 2. Dirt and scratches on the shield/visor may obstruct your view while riding and can be very dangerous! If the shield/visor gets dirty or scratched, stop using it immediately. Remove the shield / visor and clean or replace it.
- 3. The shield / visor should be cleaned with a solution of mild, neutral soap and water. Rinse well with pure water then wipe dry with a soft cloth. Do not use any of the following cleaning materials: hot water over 40°C; salt water; any acidic or alkali detergent; benzine. thinner, gasoline, or other organic solvents; glass cleaner; or any cleaner containing organic solvents. If any of these cleaners are used, the shield's/visor's chemical nature may be altered and safety may be hindered.
- 4. Do not ride with the shield / visor that is fogged. This may obstruct your view and can be very dangerous. If the shield / visor is fogged, open the shield / visor to circulate air within the helmet and remove the fog from the shield/visor. Use of the PINLOCK® lens / PINLOCK® EVO lens (optional) is also effective in stopping fog.
- 5. Always use SHOEI's gunuine PINLOCK® lens / PINLOCK® EVO lens for CNS-1 / CNS-2. For fitting PINLOCK® lens / PINLOCK® EVO lens (optional), please read instructions
- 6 When mist retardant PINLOCK® lens / PINLOCK® EVO lens is attached to these shields / visors, light transmittance ratio decreases maximum by 10%.
- 7. Don't use tinted or spectra shield/visor and sun visor together. Or, your vision will be limited and can be very dangerous.
- 8. Don't use tinted shields / visors under dark circumstances such as in the night, tunnel, under rain or fog.
- 9. Color of mirror coated shield / visor may change while used.
- 10. After cleaning or replacing the base plates, close the shield / visor and make sure that it touches the window bead in all around. If there is a gap between the shield / visor and the window bead, adjust a position of the base plate and eliminate the gap, because it may cause roll-in of wind or noise.
- 11. For tightening screws, apply No.2 size Phillips head screwdriver vertically and rotate it carefully. If improper sized screwdriver or electric screwdriver is used, a screw head may be broken. Use a genuine screw made of aluminum for replacement. If a screw is tightened too much, it may be broken. (Recommended torque: 80 cN.m or about 8 kgf.cm)
- 12. Do not place any sticker or tape in the shield's / visor's field of vision.
- 13. This shield / visor is not for sale or use in USA.